



Descaling Instructions

1. Disconnect truck-mount water inlet and solution outlet hoses.
2. **Manufacture Recommendations** – Drain half of water from water box.
Barker-Hammer Recommendations – Drain all water
3. At least 1 gallon of water must remain in water box.
4. Run truck-mount to warm water (**NOT HOT**)
5. **Manufacture Recommendations** - With truck-mount running, SLOWLY sprinkle contents of one TRUCKMOUNT DESCALER container (2 lbs) into water box to dissolve.
Barker-Hammer Recommendations -
Mix half of the 2lb container of descaler in a separate bucket with water till dissolved. Then pour the mixture into your water box.
6. Let truck-mount run for 15 minutes to remove scale.
7. **Manufacture Recommendations** - Immediately connect water inlet hose and solution hose, flush with clear water for 5 minutes.
Barker-Hammer Recommendations 15 – 30 minutes of flushing with clear water.
8. Add 1/2 cup of high pH liquid extraction detergent and run for 2-5 minutes to neutralize residual acid.
9. Flush with clear water to remove detergent.
10. **Barker-Hammer Recommends**
Descaling should be done every 250 hours or 4 times a year.

Call Barker-Hammer Service at 952-641-3249.